

Yealink W73P

- A** Receiver - Receives audio in receiver mode.
- B** Power LED Indicator - Indicates call status, message status, and charging status.
- C** Phone Screen - Shows information
- D / O** Soft Keys - Access the function directly. It depends on the operating situation.
- E** Message Key - Accesses the voice mail or missed call.
- F** Navigation Keys - Scroll through information or options on the screen.
- G** On-hook Key/Power Key
 - Press briefly to return to the previous screen.
 - Long press to return to the idle screen.
 - Press to turn the handset on.
 - Long press on the idle screen to turn the handset off.
 - Cancels actions or ends a call.
 - Rejects an incoming call.
- H** Keypad - Provides digits, letters, and special characters.
- I** Mute Key - Toggles mute feature on or off.
- J** Microphone - Picks up Audio
- K** TRAN Key - Transfers a call to another party, also used to put a caller on hold.
- L** Off Hook Key
 - Answers an incoming call.
 - Enters the redial calls list.
 - Places a call-in receiver or headset mode.
- M** OK Key - Confirms actions or enters the main menu.
- N** Speakerphone Key
 - Switches among the receiver, headset, and handsfree modes.
 - Answers an incoming call.
 - Places a call in handsfree mode.



MAINCOMS
BUSINESS TELEPHONE SYSTEMS & CONSULTANCY